1. Select the location where the SPD4Home and SPD4Flush will be mounted. Aesthetics may have to be sacrificed in order to achieve maximum surge protection.
2. Place the SPD4Flush plate where it will be mounted and trace the center hole and mounting holes. Cut this shape into the mounting surface and mount the SPD4Flush panel to the mounting surface (see Figure 3).
3. BE CAREFUL TO NOT DROP THE SPD4HOME INTO THE WALL.
4. Install the SPD4Home to the back side of the SPD4Flush plate using the four 8/32 x 5/8" thread cutting screws provided with the SPD4Flush.

Figure 3
Typical Flush Mount SPD4Home Installation

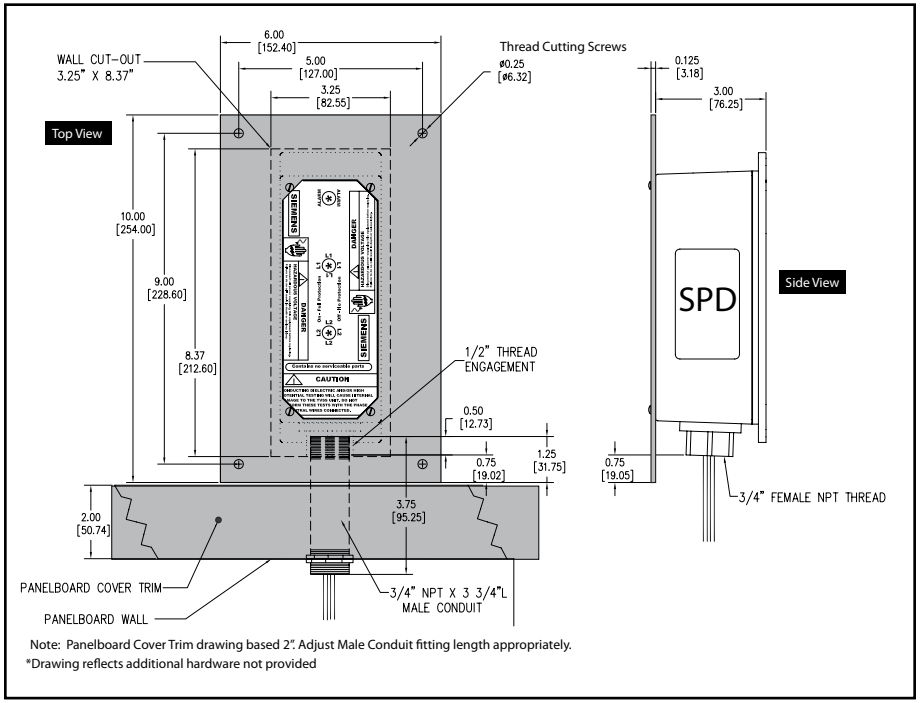

Note: Panelboard Cover Trim drawing based 2". Adjust Male Conduit fitting length appropriately.
*Drawing reflects additional hardware not provided

Flush Mount Installation Instructions

1. Select the location where the SPD4Home and SPD4Flush will be mounted. Aesthetics may have to be sacrificed in order to achieve maximum surge protection.
2. Place the SPD4Flush plate where it will be mounted and trace the center hole and mounting holes. Cut this shape into the mounting surface and mount the SPD4Flush panel to the mounting surface (see Figure 3).
3. BE CAREFUL TO NOT DROP THE SPD4HOME INTO THE WALL.
4. Install the SPD4Home to the back side of the SPD4Flush plate using the four 8/32 x 5/8" thread cutting screws provided with the SPD4Flush.

Figure 3
Typical Flush Mount SPD4Home Installation

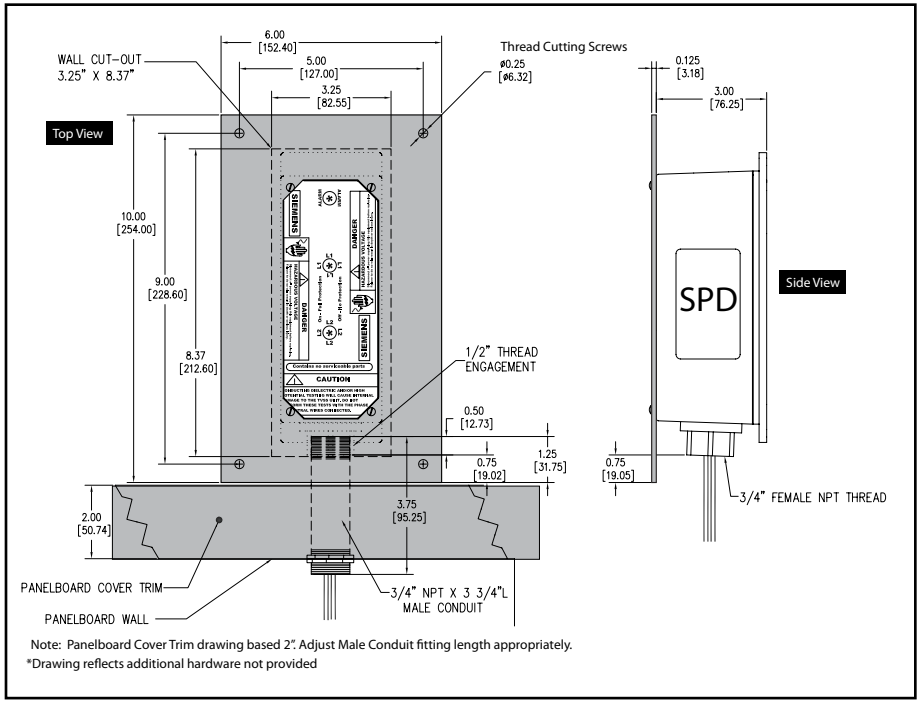

Note: Panelboard Cover Trim drawing based 2". Adjust Male Conduit fitting length appropriately.
*Drawing reflects additional hardware not provided

1. Choisir l’endroit où le SPD4Home et SPD4Flush seront installés. Il est possible de devoir sacrifier l’esthétique afin d ‘assurer la meilleure protection possible.
2. Placer la plaque du SPD4Flush ou il sera installé et marquer le trou du milieu ainsi que les trous des vis de montage. Découper la forme tracée afin d’installer le panneau du SPD4Flush au mur (voir Figure 3).
3. FAIRE ATTENTION DE NE PAS FAIRE TOMBER LE SPD4HOME DANS LE MUR.
4. Installer le SPD4Home derrière la plaque pour montage encastré en utilisant les quatre vis de 8/32X5/8 ” fournies avec le SPD4Flush.

Figure 3
Installation typique du SPD4Home en montage encastré

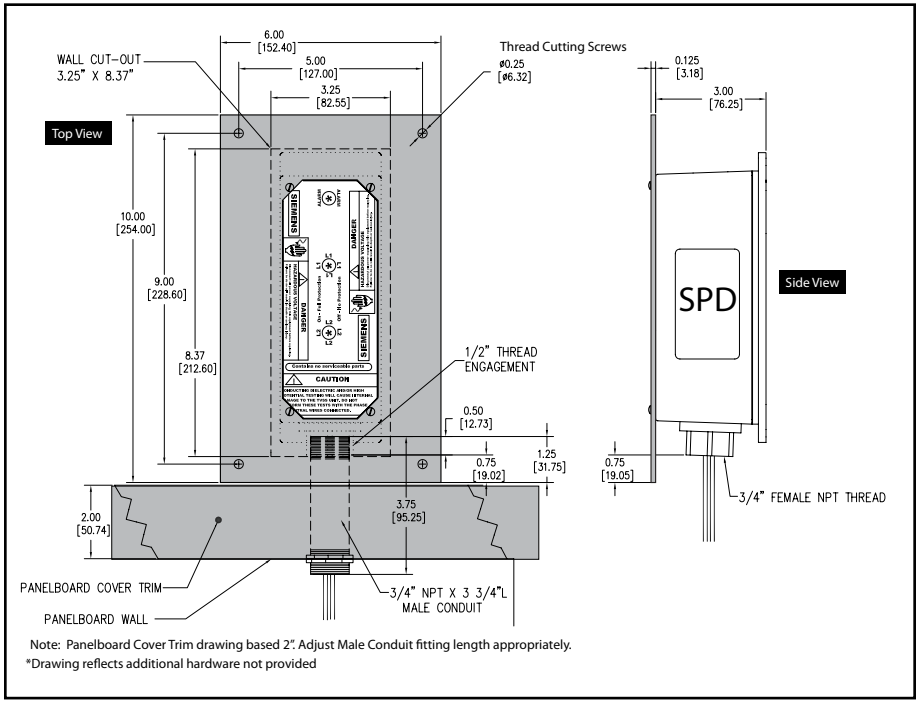

Note: Panelboard Cover Trim drawing based 2". Adjust Male Conduit fitting length appropriately.
*Drawing reflects additional hardware not provided

Manuel d’installation pour montage encastré

1. Choisir l’endroit où le SPD4Home et SPD4Flush seront installés. Il est possible de devoir sacrifier l’esthétique afin d ‘assurer la meilleure protection possible.
2. Placer la plaque du SPD4Flush ou il sera installé et marquer le trou du milieu ainsi que les trous des vis de montage. Découper la forme tracée afin d’installer le panneau du SPD4Flush au mur (voir Figure 3).
3. FAIRE ATTENTION DE NE PAS FAIRE TOMBER LE SPD4HOME DANS LE MUR.
4. Installer le SPD4Home derrière la plaque pour montage encastré en utilisant les quatre vis de 8/32X5/8 ” fournies avec le SPD4Flush.

Figure 3
Installation typique du SPD4Home en montage encastré

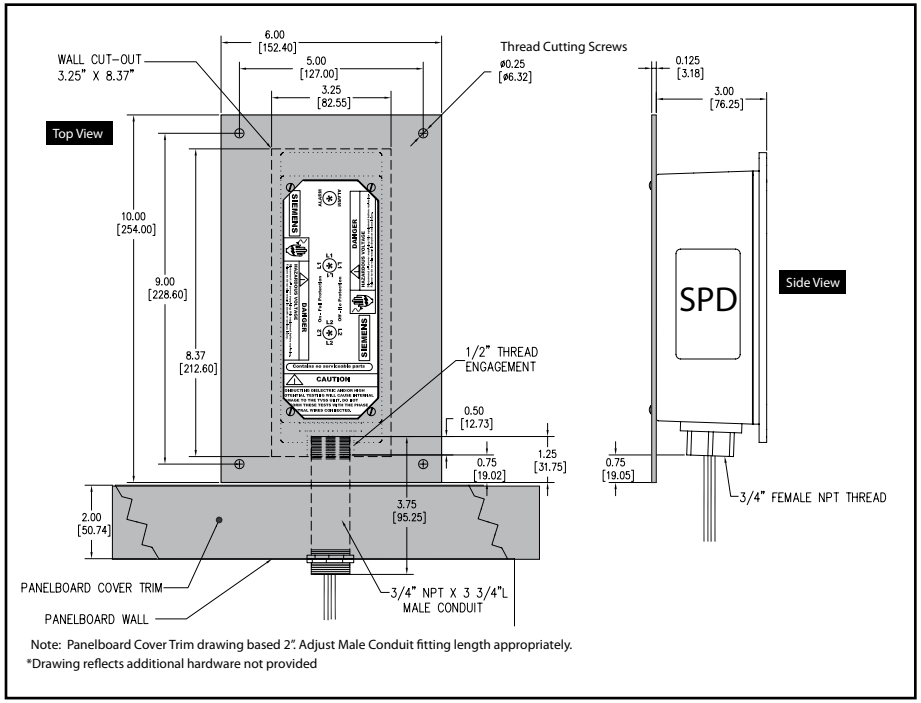

Note: Panelboard Cover Trim drawing based 2". Adjust Male Conduit fitting length appropriately.
*Drawing reflects additional hardware not provided